

2nd Generation

Solar Hand Crank Radio Flashlight

 
Emergency Power Bank with Micro-USB

FUNCTION:

- 3 Bright White LED
- FM / AM / WB Radio
- Recharge cell phone in emergency.
- Multiple ways to power the radio flashlight.
- SOS Siren Function

USING THE RADIO

- Turn the VOLUME dial clockwise to turn the radio on and control volume.
- Select AM, FM or WB with radio band. For better reception, extend the RADIO ANTENNA.
- Turn TUNER DIAL to select station. The green tune indicator light will come on when the station selected is fully engaged.
- Press the FLASHLIGHT SWITCH twice in one second to activate SOS Siren Function, Press it again to turn it off.

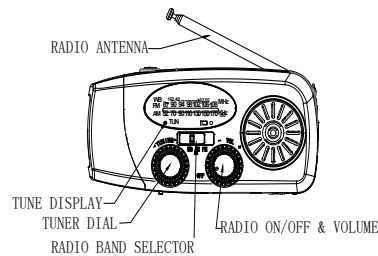


USING THE FLASHLIGHT


- Press the flashlight switch to turn it on.
- Press the flashlight switch to turn it OFF.

SOLAR / HANDCRANK / USB POWER

 A SOLAR POWER

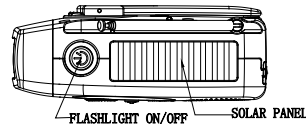


 - Place product in average sunlight for approximately 10-12 hours, the red CHARGING INDICATOR flashes when charging.

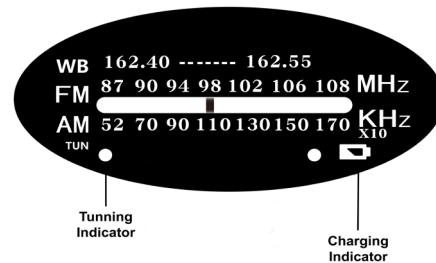

B HAND CRANK POWER

 
- Lift the HAND CRANK.
- Hand crank either clockwise or counterclockwise for 3-5 minutes to activate the internal battery for initial use, or when the unit has been idle for more than 60 days. The red CHARGING INDICATOR flashes when cranking

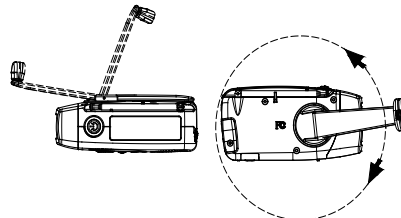

- For subsequent charges, turn the handle crank for 2-3 minute (crank speed ≥ 130 rpm) to produce: 10~15 minutes of continuous light for three LED; 10~15 minutes of continuous radio usage (medium volume); 3-5 minutes of talk time.


C USB PORT CHARGING

 - Insert one end of the CHARGING CORD into the Micro USB JACK and the other end into the computer USB port. The red CHARGING INDICATOR flashes when the li-ion battery is charging.

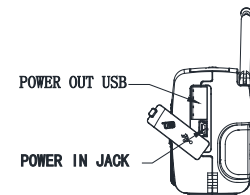

CHARGING YOUR CELL PHONE, PDA, MP3...

 - Lift the rubber tab on the side of the unit.

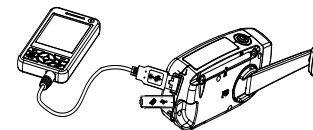

- Insert one end of the CHARGING CORD into the standard USB port and the other end with the external device to be charged.

Charging Protection

- Red charging indicator will turn on steadily when the unit

is fully charged.

Discharging Protection

- When battery is overloading or short circuit, it would stop output automatically
- When battery voltage is lower than 2.5v, Power source will shut down automatically

SPECIFICATION:

- Dimensions: 128X60X45 (mm)
- Weight: approximately 270g
- Maximum power consumption: 0.5W
- Frequency range:
 - AM 520~1710 KHz
 - FM 87~108 MHz
 - NOAA: 162.400~162.550 MHz
- Working voltage: 2.7V~4.2V
- Power source: 2000mAh Li-ion battery.

CARE AND MAINTENANCE:

- Wipe the outside of the unit with a soft, damp cloth.
- Clean the lens with a standard lens cleaning product.
- Do not clean unit with harsh abrasive or any solvents.
- Unit is NOT waterproof totally---only waterproof Ip_{x3}. DO NOT submerge in water.
- When unit is idle over 60 days, Or FIRST USE. Please hand crank or sunlight recharge for 3 to 5 minutes to activate the internal battery.